 




Rougham Ground Movements




Models are to land before any full-size taxys North of this line

Models remain on the ground until full-size has departed

Models remain grounded until full-size is South of the line




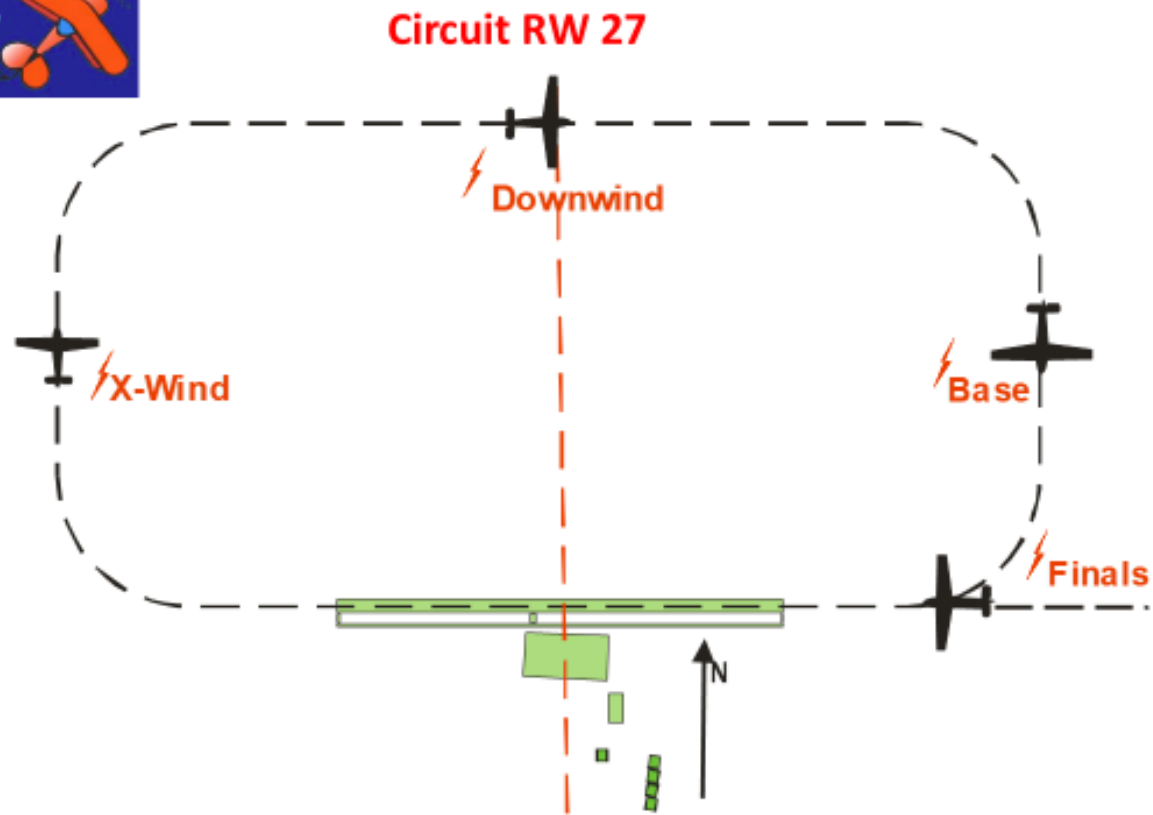

**Models are to land when full-size calls "Downwind" or
flies East of this line**



Circuit RW 09

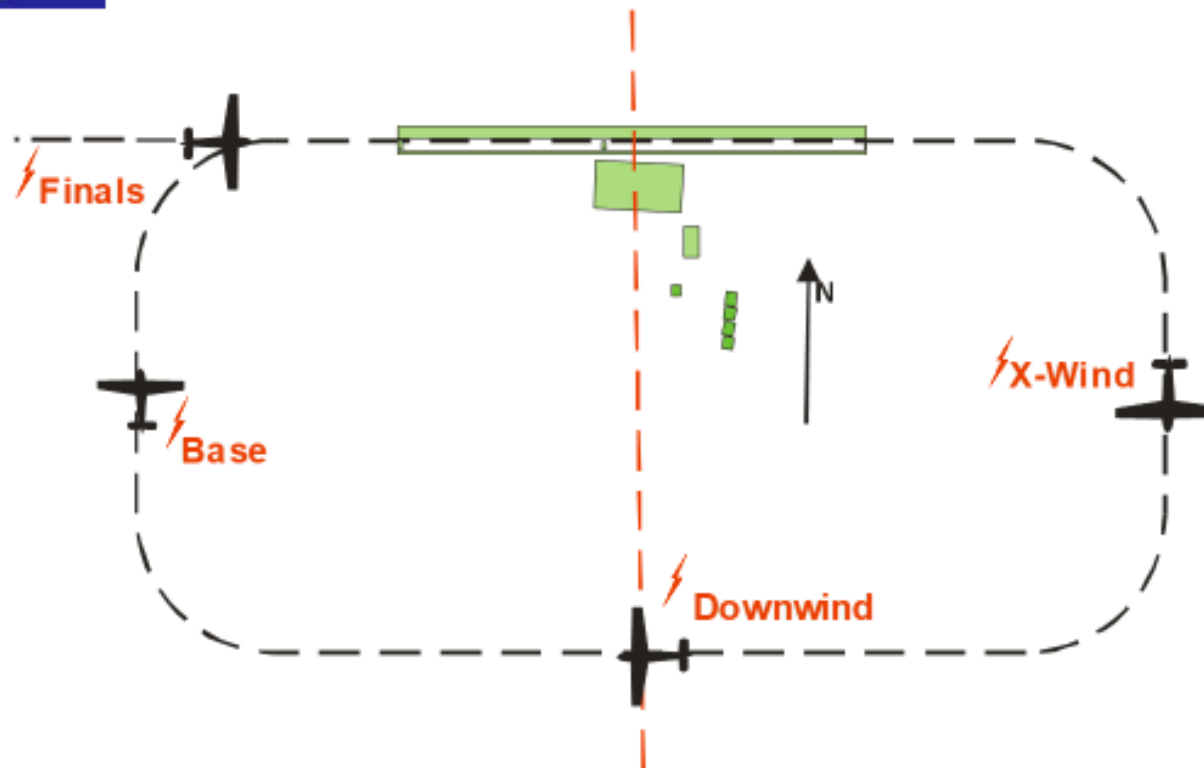

Models are to land when full-size calls "Downwind" or flys West of this line